USER GUIDE

SIXTY

Sagemcom

Dear customer,
You have just acquired a new generation Sagemcom telephone and thank you for placing your confidence in us.

This device has been manufactured with the utmost care. If you should have difficulties in operating it, we recommend that you consult this user manual.

This product follows a strategy of continuous development. We reserve the right to make changes without notice, modifications and improvements to the products described in this user manual.

You can also find information on the following site:

http://www.sagemcom.com/sixty

To operate the device safely and easily, please read carefully the paragraph “Recommendations and safety instructions”, page 4.

The A-Tick label and supplier identification number for Sagemcom Australasia PTY LTD N2514 which is registered with the ACMA certifies that this equipment complies with the ACMA telecommunications and radiocommunications regulatory requirements.

SAGEMCOM AUSTRALASIA PTY LTD
Suite 602, level 6
18-20 Orion Road, Lane Cove NSW 2066
Australia
ABN 75 131 531 989
Phone : 1300 407 500

Copyright © Sagemcom AUSTRALASIA PTY LTD
All rights reserved
Sagemcom is a registered trademark

Contents

Recommendations and safety instructions 4

Unpacking 5

Phone description 5

Your base 5

Your handset 6

Control panel 7

Phone installation 9

Connecting the base 9

Setting up the handset 9

Charging batteries 10

Settings required before use 10

Navigating in the menu 10

Menu structure 11

Browsing through the menus 11

Phone use 12

Handset location 12

Calling 12

Receiving a call 12

Making a call 13

Ending a call 13

During a call 13

Call key function 14

Secret mode 14

Hands-free mode 14

Calling the last number dialled 15

Call time display 15

Phonebook 15

Creating an entry 15

Editing an entry 16

Associating a ring tone with a phonebook entry 16

Other number 16

Deleting an entry 16

Calling using the phonebook 17

Searching for a contact 17

Call log 17

Viewing the received and dialled call log 17

The events log 18

Viewing the events log 18

Activating/deactivating the new event information screen 18

Clearing notifications 18

Information 18

Accessories 19

Alarm clock 19

Activating / deactivating the alarm clock 19

Changing the alarm clock ring tone 19

Modifying the alarm clock time 19

Timer 19

Activate the timer 19

Changing the programmed time of the timer 20

Displaying or hiding the programmed time of the timer 20

Changing the timer ring tone 20

Ring tones 20

Changing the ring tones 20

Activating or deactivating the beeps 20

Activating/deactivating the silent mode 21

Settings 21

Modifying the date and time 21

Adjusting the contrast 21

Modifying the language 21

the voicemail number (according to operator) 22

Defining forbidden prefixes - Call barring 22

Demo 22

Advanced settings 23

Base settings 23

Line settings 24

Modifying the base code 25

Answering machine 26
Enabling / disabling the answering machine 26
Modifying the outgoing message 26
Recording a personal outgoing message 26
Deleting your personal outgoing message 26
Listen to a personal message 27
Playing messages 27
Remote access to answering machine 27
Deleting all the old messages 28
TAM settings 28
Activating and deactivating call screening 28
Modifying the remote access code 28
Number of rings 29
Replacing the batteries 29
Pairing GAP-compatible DECT handsets on the SIXTY base 29
Appendix 30
Care and Maintenance 30
Problems 30
Technical characteristics 31
Initial condition 31
Environment 32
Packaging 32
Batteries and rechargeable batteries 32
The product 32
Guarantee 33
Terms and Conditions for Australia and New Zealand 33
Terms and Conditions for other countries 35

RECOMMENDATIONS AND SAFETY INSTRUCTIONS

Do not install your DECT telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.50 metres of a source of water or outside. This device is designed for use in temperatures of between 5 °C and 45 °C.

Do not attempt to remove screws or open the appliance. It does not contain any user-replaceable parts.

Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this user manual and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 240 volt power supply. Therefore the sockets should be near the device and easily accessible.

This device is designed to be used for connecting to the public switch telephone network (PSTN). If problems should arise, contact your nearest specialist dealer. Only use the telephone cable supplied.

For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock.

To avoid damaging your handset/base, only use certified rechargeable batteries NiMH 1.2 V 450 mAh, never use non rechargeable batteries. Insert the batteries in the handset/base battery compartment respecting polarity.

The used battery must be disposed of in line with the recycling regulations in this user manual.

Your DECT telephone has a range of approx. 50 metres indoors and up to 300 metres outdoors. The range can be affected by the proximity of metal objects, such as a television and electrical devices.

Zones without reception may appear owing to elements in the building. This can cause brief interruptions in the conversation, caused by faulty transmission.Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information.

In regions greatly affected by electrical storms we recommend that you protect your telephone circuit with a special fixture for excess voltage.

Your SIXTY has anti-skid pads that should leave no traces on your furniture and ensure stability. However, given the wide variety of finishes used by furniture manufacturers, traces may appear on surfaces in contact with the parts of your SIXTY. Sagemcom Australasia PTY LTD decline all responsibility in any such cases of damage.

UNPACKING

Place the box in front of you, open it and make sure it contains the following items: one base SIXTY, one handset, one telephone line cord, one equipped power adapter and this user guide.

PHONE DESCRIPTION

Your base

The SIXTY is the contemporary interpretation by SAGEMCOM of the S63, which accompanied the development of telephone communications in many countries in the 60s and 70s. It nevertheless has the latest technology, such as browser touch buttons, HiFi ringtones, dialling light and sound effects.

* Keyway: indicates the position of the handset earpiece

** Press and hold the key 1:

- If the answering machine is turned off: access to voicemail service.
- If the answering machine is turned on: access to your messages on the answering machine.

Indicator light operation:
- *Fast flashing: handset registration.*
- *Slow flashing: handset on line or new events.*

Make sure that when the handset is on the charger, the icon is animated.

Your handset

SIXTY's particularity is that it has a wireless handset.

The single button on the handset allows the user to hang up or answer an incoming call. It should be noted that the handset is provided with a buzzer that sounds on receiving an incoming call with the handset not on its base.

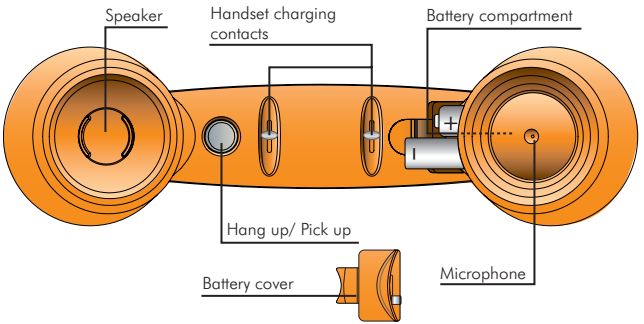

The handset batteries are charged when the handset is placed on its base. When off the base, the handset's battery power provides 120 hours of standby time and 10 hours of talk time.

Control panel

Your SIXTY has touch keys for access to configuration and settings functions. This screen tells you about the state (date and time, unread message, etc..).

Using the touch buttons

The screen includes six touch keys around its periphery. Simply touch the tactile area for the function to be taken into account:

Key	Function(s)
▲	Scroll up /Go to the menu list.
•	Context key 1: Access a menu / Validate the selection.
*	Asterisk key.

Key	Function(s)
▼	Browse down / Go to the menu list.
••	Context key 2: Delete an entry / Return to the previous menu.
#	# key.

Display screen

During use or on standby, the screen of your SIXTY tells you about the state of your telephone by showing icons, and in particular:

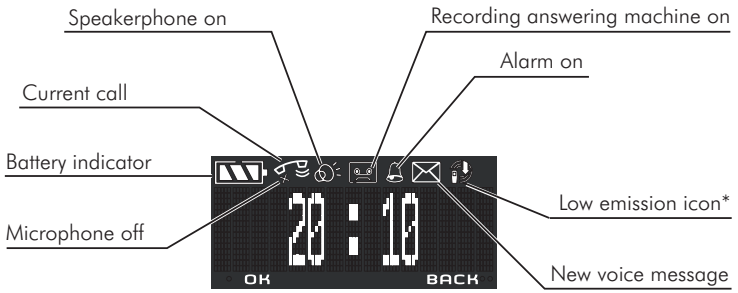

* The low emission icon (ECO mode): Your telephone is provided with an automatic power management system. As soon as the handset is near its base, the power required is reduced to the minimum. Radio transmissions are also cut off when the handset is placed on the base, and the low emission icon is then displayed.

If a second handset is paired with the base, the "low emission" icon is no longer displayed.

PHONE INSTALLATION

CONNECTING THE BASE

Before making any connections, please refer to the safety instructions presented at the beginning of this user guide.

Never force the plugs: they are in different shapes to avoid connection mistakes.

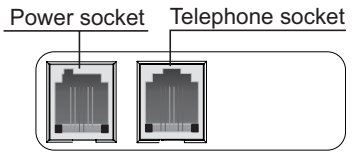

1. On the underside of the base, click the phone jack into its socket and connect the other end of the cord to the telephone wall outlet.
2. Connect the end of the power supply cord on the underside of the base and connect the power adapter to the mains socket. The phone display is turned on.
3. An information screen asks you to choose the country where you will use your telephone.
4. Select the country using ▲ and ▼ keys.
5. Press **Valid.**.

If you have made a mistake while choosing the language or the country, you have the possibility to change them later.

In order to modify the language or the country, refer-to the user guide available on our web site: www.sagemcom.com.

SETTING UP THE HANDSET

The batteries are already inserted in the handset. To put the handset into use, simply remove the tab by pulling on it firmly in the direction of the arrow.

The handset emits a double beep to indicate that it has started and then a second beep to indicate that the handset is synchronized with the base. From then on, your handset becomes operative and you can use it to make calls.

On leaving the factory, the handset is already registered in the base.

If your handset is not recognized by the base, then launch a manual registration (See paragraph "Set the base to registration mode", page 23.

You can now use your telephone to make and receive calls.

CHARGING BATTERIES

Place the handset on its base and fully charge the batteries.

An audio signal is emitted and a light flashes when the handset is placed correctly on the base.

The battery charge icon is animated to indicate that the battery is being charged and stops to indicate that the batteries are fully charged.

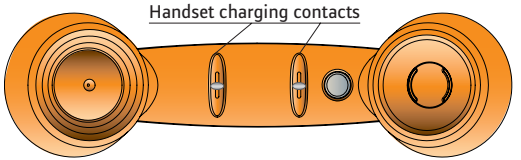

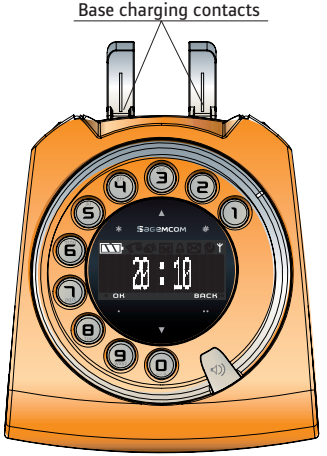

The handset batteries charging time is 10 hours. During charging, the batteries may heat up. This is quite normal and perfectly safe.

SETTINGS REQUIRED BEFORE USE

Setting the date and time accurately will enable you to follow your calls and messages chronologically.
According to where your base is situated in the room, you may have to adjust the contrast.

To set the date and time, refer to paragraph "Modifying the date and time ", page 21.

To set the contrast or the brightness of the screen, refer to paragraph "Adjusting the contrast ", page 21.

NAVIGATING IN THE MENU

With your SIXTY you can create your own telephone directory, display the list of calls etc. To do this, use the touch keys.
With the touch keys ▲ and ▼ you can choose a menu, a sub-menu or a precise setting.
The key ● allows you to enter the sub-menus of the chosen function and select the setting to modify. With the key ●● you can return to the previous function or cancel the current choice.

The keys * and # are used when you use the answering machine.

See the menu structure to familiarise yourself with what your phone can do.

Menu structure

To access one of your phone's menus, use key ▲ or ▼.

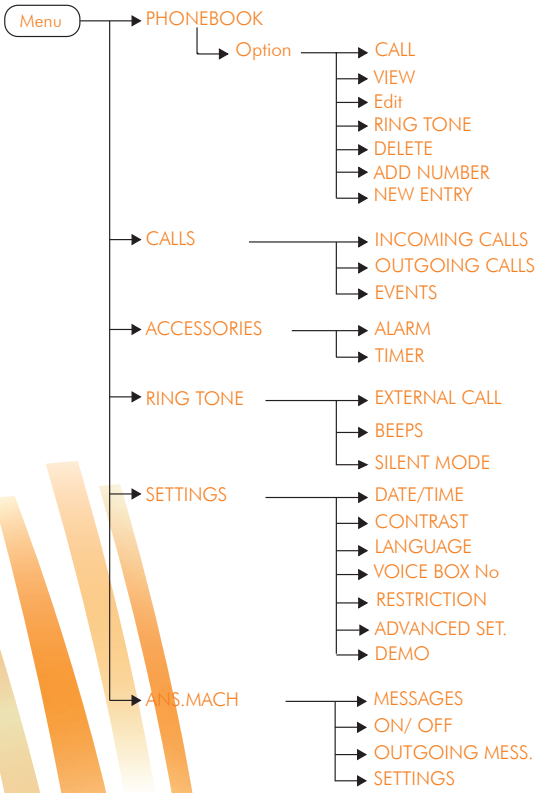

Browsing through the menus

Use the browsing keys ▲ or ▼ to select the desired menu. Press **Valid.** To confirm your selection.

Select the desired function by pressing the browsing keys ▲ or ▼ and then press the **Valid.** key.

- To return to the previous menu, press **Return**.
- To save the settings, press **Valid.**.

Example:

To access the menu **SETTINGS** /**DATE/TIME**:

1. Use ▲ or ▼ to access the menu list.
2. Select **SETTINGS** using ▲ or ▼. Press **Valid.**.
3. Select **DATE/TIME** using ▲ or ▼. Press **Valid.**

You are now under the DATE/TIME menu.

PHONE USE

HANDSET LOCATION

Lost your handset? Press the button on the back of the base, behind the keypad. The handset will then ring.

CALLING

Receiving a call

- When a call is received, the phone rings.
- The caller's phone number is displayed on the screen if you have subscribed to the "Caller ID" service. (Contact your telephone service provider).
  The caller's name may also be displayed if it is included in your phone book.

Accepting a call in handset mode

- Pick up the phone handset. You do not need to press the handset's button.
- Make sure to identify the handset direction by the dot which identifies the earpiece end. The call time counter is displayed on the screen.
- To end the call, hang up the handset or press the handset button.
- A visual and audible signal confirms that the handset is hung up correctly.
- If the handset is not on the base, you have to press the handset button to take the call.

Accepting a call in speakerphone mode

- Press to speak in speakerphone mode (without holding the handset). The symbol and the call time counter are displayed on the screen.
- To end the call, press again.

Toggle between handset mode and speakerphone mode

- If you are in handset mode, press and hold the key and then hang up the handset to toggle to speakerphone mode. Press the key again to end the call.
- If you are in speakerphone mode:
  - If the handset is hung up on the base, lift the phone handset to toggle to handset mode.
  - If the handset is not hung up on the base, press the dial tone button to toggle to handset mode.
- To end the call, hang up the handset on the base or press .

Use the ▲ and ▼ keys to vary the earphone volume or speakerphone volume. The handset earphone volume or speakerphone volume can vary from 1 to 5.

Making a call

The call can be made in two ways:

Making a call in handset mode

- Pick up the handset.
- The icon is displayed on the screen. Dial your number on the keypad.
  The call time counter is displayed on the screen.

Making a call in speakerphone mode

- Press to obtain a dial tone prompt on the screen. Dial your number on the keypad.

  The and icons are displayed on the screen. The call time counter is displayed on the screen.

You can also dial a number in pre-dialling mode, whether in handset or speakerphone mode: dial the number on the keypad and then lift the handset or press .

*If necessary, you can correct the number entered by pressing **BACK**.*

Ending a call

When you have finished your call, press or hang up the handset on the base.

During a call

Receiving a second call

- During the call, a beep is transmitted to your telephone by your service provider to let you know that you have a second call waiting.
- Press **ACCEPT** to take this new call.
- Your other caller is then put on hold and you can talk with your second caller.

Making a second call

- During a call, you can put your contact on hold and call a second one by pressing **-R-** and dial the number using the keypad.
- The second call is then launched, with the first call still on hold.

The caller on hold hears a beep emitted by the network.

To alternate from one call to the other

- To toggle from one call to the other, press **Menu** then **SWITCH**.
- The call in progress is put on hold, and you can then take the second call.

To end one of the calls and continue the other one

- To toggle from one call and take the other, press **Menu** and then **HANGING UP**.
- The call in progress is definitely terminated, and you can then take the second call.

To set up a 3 way-call (the two parties and yourself)

- During a call, press **Menu** and then **3-PARTY CONF**.
- You can then talk to both parties simultaneously, and "**3-PARTY CONF**" is displayed on the screen.
- To end the 3 way-call, hang up the handset.

Call key function

This key is a shortcut to your phone's call log.

- From the idle screen, press the key ● ● :
  - INCOMING CALLS,
  - OUTGOING CALLS,
  - EVENTS.
- Press keys ▲ or ▼ to select the calls list.
- Press **Valid.** and then select the number using keys ▲ or ▼.

Secret mode

During a call, you can switch to mute mode and your phone's microphone will be muted. The person you are on line with can no longer hear you.

To activate secret mode :

- During a call, press **Menu**/ **SECRET** and then **Activ.**.
- The "**SECRET MODE**" message will appear on the screen.

To deactivate secret mode :

- Press **Exit**, "**SECRET MODE**" disappears from the screen. Your correspondent will be able to hear you again.

Hands-free mode

If you want to phone in speakerphone mode, do not lift the handset, but press the base key; the icon is displayed on your phone's screen.

The caller can then be heard through the loudspeaker and you speak into the base microphone.

To end the call, press the key again .

If you want to toggle to speakerphone mode during a call in handset mode, press the key; the icon is displayed on your phone's screen.

The caller can then be heard through the base loudspeaker and the handset earphone and you speak into the handset microphone. In this mode the base microphone is inactive.

You can return to speakerphone mode by holding down the key and then replacing the handset.

To end the call, replace the handset or press the key .

When you call hand-free/speakerphone mode, you can increase or decrease the audio volume from 1 to 5, using ▲ or ▼.

Calling the last number dialled

Your SIXTY stores the last 20 dialled numbers:

- Go to **CALLS** / **OUTGOING CALLS**.
- Select the number you want to call.
- Go to **Option** / **CALL**.

The number is automatically dialed in speakerphone mode.

Call time display

Once connected, the call time is displayed on the screen (minutes and seconds).

PHONEBOOK

You can save up to 150 entries in your phone book, with each entry able to contain a 24-digit number and a name up to 12 letters long.

CREATING AN ENTRY

To enter a text, repeatedly press the required key to display the desired letter.

- Go to **PHONEBOOK** / **New**.
- Enter the name of your contact using the alphanumeric keys.
- Press **Valid.**.
- Enter the contact`s telephone number using the alphanumeric keys.
- Press **Valid.**.
- Select an icon for this number to specify the type of number.
- Press **Valid.**.

The name and number are then stored in your phone book.

EDITING AN ENTRY

- Go to the menu **PHONEBOOK**.
- Press keys ▲ or ▼ to select the contact you want to change.
- Select **Option** / **Edit**.
- Press **Valid.**.
- You enter the name input screen.
  To correct the name, press **Return** to delete characters. Enter your changes on the keypad.
  After making the changes, press **Valid.**.
- You enter the number input screen.
  To correct the number, press **Return** to delete the numbers. Enter your changes on the keypad.
  After making the changes, press **Valid.**.
- Select an icon for this number.
- Press **Valid.**.

ASSOCIATING A RING TONE WITH A PHONEBOOK ENTRY

You can associate a unique ring tone to each entry and thus create your own call groups
As you need the active number presentation service on your handset, contact your operator to find out about the conditions for obtaining the service.

- Go to the menu **PHONEBOOK**.
- Select the entry with which you want to associate a ring tone.
- Go to **Option** / **RING TONE**.
- Select the ring tone of your choice.
- Press **Valid.**.

OTHER NUMBER

This function allows you to assign new numbers to the same name.

- Go to the menu **PHONEBOOK**.
- Select the entry you want to assign another number to.
- Go to **Option** / **ADD NUMBER**.
- Enter the phone number on the alphanumeric keys.
- Press **Valid.**.
- Select an icon according to the type of number entered. Press **Valid.**.

DELETING AN ENTRY

- Go to the menu **PHONEBOOK**.
- Press keys ▲ or ▼ to select the contact you want to delete.
- Select **Option** / **DELETE**.
- Press **Valid.**.
- A confirmation screen asks you if you wish to delete the entry.
  - To delete the entry, press **Yes**, the contact is deleted from your phone book.
  - If you do not wish to delete the entry, press **No**.

CALLING USING THE PHONEBOOK

- Go to the menu **PHONEBOOK**.
- From the list of names, select the contact you want to call using keys ▲ or ▼.
- Go to **Option**/**CALL**.

The number is automatically dialled in speakerphone mode.

SEARCHING FOR A CONTACT

- Access your phonebook list, press successively on the keypad key which corresponds to the first letter of the name you are searching for so as to make it appear at the top of the screen.
- Once the first letter of the name is displayed, wait a moment.
- The phonebook selects the first name in the list that starts with the selected letter.

CALL LOG

Caller identification is a service that requires prior registration with your operator.

To check your call log directly, press the Log key ●● from the idle screen.

VIEWING THE RECEIVED AND DIALLED CALL LOG

- Go to the menu **CALLS** / **INCOMING CALLS** or **OUTGOING CALLS**.
- Select the event to be viewed.
- Press **Valid.**.
- The screen presents the following information. (depending on the operator and the subscription):
  - the full name of your contact and the telephone number,
  - the number of consecutive calls,
  - time (for calls during the day) or the date (for previous calls) of the call.

The calls are organised in chronological order, from the most recent call to the oldest call.

To see the previous calls, use the keys ▲ or ▼.

By pressing **Option**, a list of various executable actions appears:

- **CALL** : To call the number.
- **VIEW** : To view the selected call again.
- **STORE NUMBER** : To store the name and number in the phonebook.
- **DELETE** : To delete the call currently viewed.
- **DELETE ALL** : To delete all calls.

To return to the call viewing screen, press **Return**.

THE EVENTS LOG

Viewing the events log

If one or more new events occurred during your absence, the information screen "**NEW EVENTS !**" appears and the light starts flashing.

- If you do not wish to view the event log at this time, press **Return**.
- To view the event log, press **Valid.**.
- Choose the event using ▲ or ▼.
- Press **Valid.**.

The light only stops flashing when all the events have been viewed.

Activating/deactivating the new event information screen

The new event information screen can be inhibited.

The events which have occurred can then be viewed in the menu **CALLS** */* **EVENTS** */* **VIEW**. *The default setting is active.*

- Go to the menu **CALLS** / **EVENTS**.
- Select **ACTIVATE** or **DEACTIVATE** to enable or disable the displaying of the new events screen.
- Press **Valid.**.

Clearing notifications

The notifications received are saved in the event log and can be deleted once they have been viewed.

- Go to the menu **CALLS** / **EVENTS**.
- Select **DELETE NOTIF.** and press **Valid.** to remove the notifications received on your base.

INFORMATION

During an incoming call, following messages can be displayed:
PRIVATE: Your contact does not want their number to be displayed.

UNAVAILABLE: If there is a problem on the phone network.

ACCESSORIES

ALARM CLOCK

This function enable you to use your SIXTY as an alarm clock.

When the alarm is triggered the selected ring tone sounds for 60 seconds through the handset speaker and an alert screen is displayed.

Activating / deactivating the alarm clock

- Go to **ACCESSORIES** / **ALARM**.
- An information screen shows the alarm clock status.
- Use ▲ or ▼ to select **ACTIVATE** or **DEACTIVATE**.
- Press **Valid.**.

The alarm settings information screen appears showing the new status.

Changing the alarm clock ring tone

- Go to **ACCESSORIES** / **ALARM**.
- Use ▲ or ▼ to select **RING TONE** in the list, press **Valid.**.
- Select the ring tone of your choice, press **Volume**.
- Select the desired ring tone using ▲ or ▼ to increase or decrease the volume, press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Modifying the alarm clock time

- Go to **ACCESSORIES** / **ALARM**.
- Use ▲ or ▼ to select **SET TIME**.
- Enter the time at which you would like the alarm clock to sound.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

TIMER

With this menu you can use your telephone as a timer.

The timer function must be inactive so that it can be set.

Once the specified time has elapsed, the base rings for 60 seconds and the alarm screen is activated. Turn off the alarm by pressing **Stop**, the base stops ringing.

Activate the timer

- Go to **ACCESSORIES** / **TIMER**.
- Press **Start**. If a timer duration is already specified, the timer is directly activated. If not please follow instructions in the next paragraph.

Changing the programmed time of the timer

- Go to **ACCESSORIES** / **TIMER**.
- Press **Valid.**.
- Select **SET DURATION** in the list. Press **Valid.**.
- Enter the desired time.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Displaying or hiding the programmed time of the timer

- Go to **ACCESSORIES** / **TIMER**.
- Select **VIEW** in the list. Press **Valid.**.
- If you want to show the timer, press **Yes**, else press **No**.
- Press **Return**.

Changing the timer ring tone

- Go to **ACCESSORIES** / **TIMER**.
- Select **RING TONE** in the list of options, press **Valid.**.
- The list of ring tones appears, the handset plays the ring tone.
- Select the ring tone. Press **Volume**.
- Press ▲ or ▼ to increase or decrease the volume.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

RING TONES

CHANGING THE RING TONES

This menu enables you to associate a unique ring tone to incoming calls.

- Go to **RING TONE** / **EXTERNAL CALL**.
- Press **Valid.**.
- Select the ring tone of your choice.
- Press **Volume**.
- Adjust the ringer volume using ▲ or ▼.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ACTIVATING OR DEACTIVATING THE BEEPS

- Go to **RING TONE** / **BEEPS**.
- Press **Valid.**.
- To change the beep status, press ▲ or ▼. The status is changed on the screen.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ACTIVATING/DEACTIVATING THE SILENT MODE

When in silent mode, the telephone ringer and keypad beeps are inhibited.

- Go to **RING TONE** / **SILENT MODE**.
- SILENCE MODE? is displayed on the screen.
- Press **Yes** to activate the silent mode.

When you activate the silent mode, your handset is muted for all timer and alarm type functions.

SETTINGS

MODIFYING THE DATE AND TIME

- Go to **SETTINGS** / **DATE/TIME**.
- Enter the date in DD/MM/YY format.
- Press **Valid.**.
- Enter the time in HH/ MM format.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ADJUSTING THE CONTRAST

- Go to **SETTINGS** / **CONTRAST**.
- A list with five levels of contrast is displayed.
- Select the level you want using the keys ▲ or ▼. The contrast is directly visible on the screen.
- when you have obtained a satisfactory level.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

MODIFYING THE LANGUAGE

- Go to **SETTINGS** / **LANGUAGE**.
- An information screen presents the current language used.
  - To keep the setting, press **Valid.**.
  - To change the setting, press ▲ or ▼.
- Select the language.

- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

The answering machine message language depends on the phone language.

THE VOICEMAIL NUMBER (ACCORDING TO OPERATOR)

This function allows you to receive calls in your absence on your operator's voicemail service.

To indicate that a new message has been received the reception indicator on the the top of the '1' key is lit in red and the new event message is displayed on the screen.

To change the voice box number, proceed as follows:

- Go to **SETTINGS** / **VOICE BOX No**.
- The programmed number is displayed on the screen.
  - The number is correct, press **Valid.**.
  - To modify the number, press **Edit**.

To check your voicemail service, hold down key (1).

DEFINING FORBIDDEN PREFIXES - CALL BARRING

You can prohibit the use of certain prefixes on your telephone.

When a prefix is forbidden, it becomes impossible to call numbers that begin by this prefix.

- Go to **SETTINGS**/ **RESTRICTION**.
- Enter the base code (by default **0000**), press **Valid.**.
- Select **PREFIX** using ▲ or ▼, press **Valid.**.
- Select a location (dashes), press **Valid.**.
- Enter the prefix using the keypad (for example : 06, 08, etc..).
- Press **Valid.**.
- **OK** is displayed on the screen.
- Select **ACTIVATE** using ▲ or ▼.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

DEMO

This menu allows you to see an animation for each of your phone's key and ring tones.

- Go to **SETTINGS** / **DEMO**.
- Press **Valid.**.
- Display of "**DEMO Chenillard**" with the animation of each key.

- Press the key during this animation, "**DEMO MELODY**" is displayed, and the melody for external calls is initiated.
- Press **Exit** to stop the demonstration.

ADVANCED SETTINGS

Base settings

Set the base to registration mode

Using this function you can add GAP compatible hnadsets to your base. The handset that you want to pair with your base must itself be in pair mode.
Consult the user booklet of your handset to find out what to do.

You can save up to 5 GAP-compatible handsets on your SIXTY base.

- Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **REGISTR. MODE**.
- Press **Valid.**.
- **REGISTR. MODE?** is displayed on the screen, press **Yes**.
- Indicator on the the top of the '1' key starts to flash rapidly. Your base will remain in registration mode for about 1 minute.

You can also set the base to pairing mode by holding down your base's key.

Resetting the base

When you reset your base, all the base parameters are reset to their initial values (factory settings).

- Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **RESET BASE**.
- Press **Valid.**.
- **REINIT. BASE?** is displayed on the screen.
- Press **Yes**.
- Enter the base code.
- Press **Valid.**.
  The "**RE-INIT. IN PROCESS**" and the **OK** messages are displayed successively.

Your base is now reset.

De-registering a handset

- Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **DELETE HANDSET**.
- Press **Valid.**.
- Select the handset you wish to unregister using ▲ or ▼.
- Press **Valid.**.
- A screen prompts you to confirm the unregistration.

Press **Yes** to unregister the handset.

The handset is no longer registered to the base.

Line settings

Before changing the settings of the telephone line, contact your operator to obtain the parameters for your line.

Modifying the dialling mode

The type of dialling generally used is voice frequency. It is possible that the exchange to which you are connected uses pulse dialling.

- Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **DIAL**.
- Press **Valid.**.
- A screen displays the current status.
  - To keep the status, press **Valid.**.
  - To modify the status, press ▲ or ▼. The status is modified on the screen.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

The default dialling mode is tone.

Modifying the flash duration

If you connect your telephone to a private automatic branch exchange or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, 3 way calling.

Contact your service provider to obtain the correct flash duration and then modify it by doing the following.

- Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **FLASHING**.
- Press **Valid.**.
- An information screen presents the current flash duration.
  - To keep the duration, press **Valid.**.
  - To modify the duration, press ▲ or ▼.
- Select the new duration.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Setting a PABX prefix

If a private automatic branch exchange is used, you can programme the external call prefix.

With this function you can set the:

- PABX prefix number,
- dialled number length at which point the PABX prefix will be automatically inserted (this length is called “digit before prefix”),
- prefix status (on or off).

- Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **PABX PREFIX**.
- Press **Valid.**.
- Press ▲ or ▼ to modify this setting.
- Select the desired option:
  - **ACTIVATE** / **DEACTIVATE** : to select a status.
  - **PREFIX** : to enter the number giving you access to the outside line.
  - **EDIT LENGTH** : to specify the «digits before prefix».
- To modify the prefix, select **PREFIX** press **Valid.**.
- Enter the prefix using the keypad, press **Valid.**. **OK** is displayed on the screen.
- To modify the digits before prefix, select **EDIT LENGTH**, press **Valid.**.
- Enter the digits before prefix using the keypad.
- Press **Valid.**. **OK** is displayed on the screen.
- Now you can activate the automatic PABX prefix functionality, select **ACTIVATE** and press **Yes**.
- Press **Return** to go back to the previous menu.

Modifying the base code

This code secures and limits the use of your telephone.

- Go to **SETTINGS** / **ADVANCED SET.** / **CHANGE CODE**.
- Press **Valid.**.
- Enter the old base code using the keypad (default is 0000).
- Press **Valid.**.
- Enter the new base code using the keypad.
- Press **Valid.**.
- Confirm by entering the new base code again.
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

ANSWERING MACHINE

Your phone's answering machine provides the following features:

- *Active answering machine mode with pre-recorded messages,*
- *Call filtering,*
- *Remote querying.*

ENABLING / DISABLING THE ANSWERING MACHINE

- Go to **ANS. MACH** / **ON/OFF**.
- Press **Valid.**.
- A screen displays the current status of the answering machine (On or Off).
  - To keep the displayed status, press **Valid.**.
  - To change the status, press ▲ or ▼:
    - To activate the answering machine, select **ACTIVATE**.
    - To turn off the answering machine, select **OFF**. Press **Valid.**.
- **EFFECTUE** is displayed on the screen.
- Press **Return** to go back to the previous menu.

If you have not recorded a personal message, the answering machine will automatically use one of the pre-recorded messages in the selected language.

MODIFYING THE OUTGOING MESSAGE

In order to modify an outgoing message, you must first turn on the answering machine.

Recording a personal outgoing message

- Go to **ANS. MACH** / **OUTGOING MESS.** / **CHANGE**.
- Press **Valid.**.
- **RECORD OGM** is displayed on the screen.
- Press **Begin** to start recording your outgoing message. Start talking in the base microphone.
- To stop recording press **End**. Your outgoing message is automatically played back.
- Press **Return** to go back to the previous menu or make a new recording.

Deleting your personal outgoing message

If you delete your personal outgoing message, the answering machine will automatically use the anonymous message.

- Go to **ANS. MACH** / **OUTGOING MESS.** / **DELETE**.
- Press **Valid.**.

- **DELETE ANOUNCE?** is displayed on the screen, press **Yes** to confirm the deletion of your personal outgoing message.
- **OGM DELETED** is displayed on the screen.
- Press **Return** to go back to the previous menu.

Listen to a personal message

If you have not recorded a personal message, you will hear the anonymous, pre-recorded message.

- Go to **ANS. MACH** / **OUTGOING MESS.** / **PLAY**.
- Press **Valid.**.
- **PLAY OGM** is displayed on the screen and the outgoing message is played back. At the end of the playback you will return to the menu **RECORD OGM**.
- Press **Return** to go back to the previous menu.

PLAYING MESSAGES

If you have new messages (unread), these messages are read first. Afterwards, the messages that have already been taken are played back in chronological order (from the oldest messages to the most recent messages).

- Go to **ANS. MACH** / **MESSAGES** / **PLAY**.
- Press **Valid.**.
- The messages are played through the loudspeaker.
- Depending on your service provider and your subscription, the name and number of your contact will be displayed on the screen (except for a confidential call).
- During playback, you can use the touch-sensitive keys to perform the following actions:
  - ***** : go back to the beginning of the message.
  - ***** twice : return to the previous message.
  - **#** : go to the next message.
  - **Pause**/**PLAY** (context key 1): pause/resume playback.
  - **DELETE** (context key 2): delete the message being played.
  - : exit playback of messages.

REMOTE ACCESS TO ANSWERING MACHINE

Your answering machine can be queried remotely. This feature allows you to read your messages and query your answering from any phone when you are not at home.

To remotely access your answering machine:

- Dial your telephone number.
- Wait for the answering machine to come on.
- When your outgoing message is played, press «#».
- Enter your remote access code.

The remote access code is 0000 by default. However, it can only be used once it is customised, refer to paragraph "Modifying the remote access code ", page 28.

- A beep will indicate access to the answer machine, Any unread messages will be automatically played back.
- At the end of playback, a new beep will sound to let you know that the answer machine is ready.
- You can carry out the following operations :
  - **0** : delete the message being played.
  - **1** : go back to the beginning of the message.
  - **1** (x2): previous message.
  - **2** : pause / play.
  - **3** : next message.
  - **5** : messages read.
  - **9** : enable/disable the answering machine.

DELETING ALL THE OLD MESSAGES

To delete old messages one by one, refer to the previous paragraph and delete unwanted messages during playback.

- Go to **ANS. MACH** / **MESSAGES** / **DELETE OLD**.
- Press **Valid.**.
- To confirm the deletion of all the old messages, press **Yes**.
- Press **Return** to go back to the previous menu.

TAM SETTINGS

This menu allows you to change the advanced settings of your answering machine. You can access the answering machine **SETTINGS** menu from the **ANS. MACH** menu.

ACTIVATING AND DEACTIVATING CALL SCREENING

The filtering function, when activated, allows you to listen to the message left by the caller as it is being recorded. You can unhook to answer at any time.

- Go to **ANS. MACH**/**SETTINGS**/**CALL SCREENING**.
- Press **Valid.**.
- A screen indicating the function status appears.
  - To keep the current status, press **Valid.**.
  - To change the status, press ▲ or ▼.
- Press **Valid.**.

MODIFYING THE REMOTE ACCESS CODE

The remote access code enables you to listen to the messages left on your answering machine via another telephone.

- Go to **ANS. MACH** / **SETTINGS** / **REMOTE CODE**.
- Press **Valid.**.
- **CODE BASE** is displayed, enter your Base code (default setting is 0000).

- Press **Valid.**.
- **CODE DISTANCE** is displayed, enter the new remote access code (4 digits mandatory).
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

NUMBER OF RINGS

This parameter determines the number of times your phone rings before your answering machine is started. The number of rings is between 3 and 7.

- Go to **ANS. MACH** / **SETTINGS** / **NO OF RINGS**.
- Press **Valid.**.
- The programmed number of rings is displayed on the screen. Press keys ▲ or ▼ to change this number (from 3 to 7).
- Press **Valid.**. **OK** is displayed on the screen.
- Press **Return** to go back to the previous menu.

REPLACING THE BATTERIES

- Remove the battery compartment hatch.
- Remove the old batteries, insert the new batteries one by one in compliance with the polarity of the batteries, as indicated in paragraph “Your handset”, page 6.
- Refit the battery compartment hatch.
- Leave your handset on its base in order to fully charge the batteries.

PAIRING GAP-COMPATIBLE DECT HANDSETS ON THE SIXTY BASE

Additional GAP-compatible DECT handsets can be registered on the SIXTY base.

To register an additional handset on the SIXTY base:

- Set your base to pairing mode by holding down the key. The light indicator on the top of the '1' key starts flashing. The base remains in pairing mode for one minute.
- Set the additional handset to registration mode. (Refer to the your handset's user manual).

Up to five GAP-compatible DECT handsets can be registered on the SIXTY base.

APPENDIX

CARE AND MAINTENANCE

Turn off your phone. Use a soft damp cloth to wipe it. Do not use a dry cloth, strong liquid detergents, thinners, alcohol or any other type of solvent to clean your phone. These products may damage your phone.

PROBLEMS

Refer to the table presented below in case of an operational malfunction:

Problems	Possible causes	Remedies
You are having trouble reading or cannot read the display when not in standby mode.	Contrast too low.	Increase the contrast level (refer to paragraph "Adjusting the contrast ", page 21).
No display on the base screen.	Power connection unplugged.	Check the power connection to the phone.
No tone.	The phone jack is not connected or is incorrectly connected.	Check the phone cable connection (refer to paragraph "Connecting the base ", page 9). Make sure you have a dialling tone.
	The speaker volume is too low.	Increase the speaker volume (refer to paragraph "Receiving a call ", page 12).
The phone does not ring when a call is received.	The mute mode is turned on.	Turn off the mute mode (refer to paragraph "Activating/ deactivating the silent mode ", page 21).
Your party cannot hear you.	You have turned on the mute mode (microphone off).	Turn off the mute mode (microphone off) in MENU then MUTE. Make sure that the "MUTE MODE" message is not displayed.
You obtain a "busy" dial tone for each dialled number.	Incorrect flashing time.	Set the flashing time (refer to paragraph "Modifying the flash duration ", page 24). Contact your operator to get it to provide you with the right time.

TECHNICAL CHARACTERISTICS

Standard	: DECT, GAP
Radio frequency band	: 1.88-1.90 GHz
Number of channels	: 120
Duplex mode	: TDMA
Spacing between channels	: 1.728MHz
Bit rate	: 1152 kbit/s
Modulation	: GFSK
Vocoding	: ADPCM
Transmitting power	: 250 mW

Charging time	: Handset Batteries: 10 hours
Range up to	: 300 m outside and up to, : up to 50 m inside buildings
Batteries	: Type Ni-MH, AAA, : 2 x 1.2 V 450 mAh
Handset operating time	: talk time up to 10 hours : standby time up to 120 : hours
Max answering machine capacity	24 minutes
Ambient temperature	+5°C to +45°C
Dimensions	Base(WxHxL) 138 x 190 x 106 mm Handset(WxHxL) 176 x 220 x 63 mm
Weight including batteries	Base 478 g Handset 157 g

INITIAL CONDITION

Accessories	
Alarm clock	off
Timer	off
Ring Tone	
Ringer	Traditional
Keyboard beeps	On
Silent mode	Off
Settings	
Date/Time	01/01/10 // 00:00
Contrast	Level 2
Language	English
Restriction	off
Base code	0000

Advanced Settings	
Network type	Public
Dial mode	Tone
Flashing	100 ms
PABX prefix	Off
Answering Machine	
Status	On
Call screening	Off
Remote access code	0000
Number of rings	7

ENVIRONMENT

Environmental protection and sustainable development is an important priority for SAGEMCOM. SAGEMCOM has a policy of using environmentally- friendly systems and makes environmental protection an essential part of the life-cycle of its products – from the manufacturing, to the installation, operation and disposal.

PACKAGING

The logo (green point) on the packaging means that a fee is paid to an authorised national organisation to improve packaging recycling and the recycling infrastructure. Follow the local sorting regulations for this type of waste product in order to improve recycling.

BATTERIES AND RECHARGEABLE BATTERIES

If your product contains batteries or rechargeable batteries, these must be disposed of at designated collecting centers.

THE PRODUCT

The crossed out dustbin displayed on the product signifies that it belongs to the electrical and electronic equipment group. The Australian and New Zealand regulations request you to carry out your own selective recycling collection at:

- the sales outlet when you buy a similar new device.
- the collection points available in your area (recycling centres, sorting points, etc).

This means you participate in the recycling and valorisation of used electric and electronic goods which would otherwise have a negative impact on the environment and health.

GUARANTEE

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

TERMS AND CONDITIONS FOR AUSTRALIA AND NEW ZEALAND

In order to apply the guarantee, you should contact the SAGEMCOM Helpdesk or the retailer where you purchased the equipment. Proof of purchase will be required in either case.
Please make sure that you use your equipment only for the purpose for which it was designed and under normal usage conditions.
SAGEMCOM do not accept any liability for the equipment if used outside the frame of its original designed purpose or any consequence that may arise from this usage.
Should any malfunction arise, the SAGEMCOM Helpdesk or your retailer will advise you how to proceed.
Sagemcom Help Desk Telephone: 1300 407 500

A) General Guarantee conditions

SAGEMCOM undertakes to remedy by repair or exchange at its own convenience, free of charge for labour and replacement parts, any defects in the equipment during the guarantee period of 12 (twelve) months or 3 (three) months for accessories, from the date of original invoice of the Equipment, where those defects are a result of faulty workmanship.
Unless the customer has concluded with SAGEMCOM a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer`s premises, the repairs will not be carried out on the equipment at the customer premises.
The customer must however return the defective equipment at his/her own expense, to the address supplied by the SAGEMCOM Helpdesk or by the retailer.
In the case that a product needs to be sent in for a repair, it must always be accompanied by a proof of purchase (which is not altered, written on or in any way made illegible) showing that the product is still under guarantee. In the case that no proof of purchase is enclosed, the SAGEMCOM repair centre will use the production date as its reference for establishing the guarantee status of the product.
Apart from all legal obligatory rules, SAGEMCOM, do not give any Guarantee, either implicit or explicit which is not set force in the present section, and can not be held responsible for any direct or indirect, material or immaterial damage, either in or out of the frame of the present guarantee.
If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule

applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.
This guarantee does not affect the Customer statutory rights.

B) Exclusions From Guarantee

SAGEMCOM shall have no liability under the guarantee in respect of:

- Damage, defects, breakdown or malfunction due to one or more of the following:
  - Failure to properly follow the installation process and instructions for use
  - An external cause to the equipment (including but not limited to: lightening, fire, shock, vandalism, inappropriate conditions of electrical network or water damage of any nature)
  - Modifications made without the written approval of SAGEMCOM
  - Unsuitable operating conditions, particularly of temperature and humidity
  - Repair or maintenance of the equipment by persons not authorised by SAGEMCOM
- Wear and tear from normal daily use of the equipment and its accessories
- Damage due to insufficient or bad packaging of equipment when returned to SAGEMCOM
- Usage of new versions of software without the previous approval of SAGEMCOM
- Work on any equipment or software modified or added without the prior written consent of SAGEMCOM
- Malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment.
  Communication problems related to an unsuitable environment including:
  - Problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
  - Transmission faults (for example poor geographical coverage by radio and TV transmitters, interference or poor line quality)
  - Local network faults (wiring, servers, workstations) or the failure of the transmission network (such as but not limited to interferences, fault or poor quality of the network)
  - Modification of the parameters of the cellular or broadcast network carried out after the sale of the Product
- Normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out. Servicing costs are in any event always borne by the customer.
- Malfunctions resulting from the usage of products, consumables or accessories not compatible with the equipment.

C) Out of Guarantee Repairs

In the cases set forth in B) as well as after expiry of the guarantee period, the customer must ask the Authorised SAGEMCOM Repair Centre for a cost estimation prior to work being carried out.
In such cases, the repair and delivery costs will be invoiced to the customer.
The foregoing shall apply unless otherwise agreed in writing with the customer and only for the Australia and New Zealand.

Terms and Conditions for other countries

If, despite our best efforts, your product presents any defects, you should refer to your retailer and present the proof of purchase that they gave you on the day of purchase.
Should any malfunctioning arise, the retailer will advise you what to do.
For the warranty to apply, you should ensure that the product was used in accordance with the instructions for use and the purpose for use, and that you have at your disposal the sales invoice or receipt stating the date of purchase, the name of the retailer, the reference and the serial number of the product.
No coverage shall be given under this warranty if the following conditions are applicable:

- The required documents have been modified or altered in order to take advantage of the warranty.
- The manufacturing numbers, product brands or labels have been altered or made illegible.
- Interventions on the product have been made by an unauthorized person.
- The product has been subjected to abnormal or improper use.
- The product has been damaged by external factors such as lightning, over-voltage, moisture, accidental damage, improper care as well as all Acts of God.

This present warranty does not affect the consumer rights that you may have under the laws in effect in your country.

Important:
Should you return the product to the after-sales department, please ensure that you return as well all the elements and accessories originally supplied with the product.

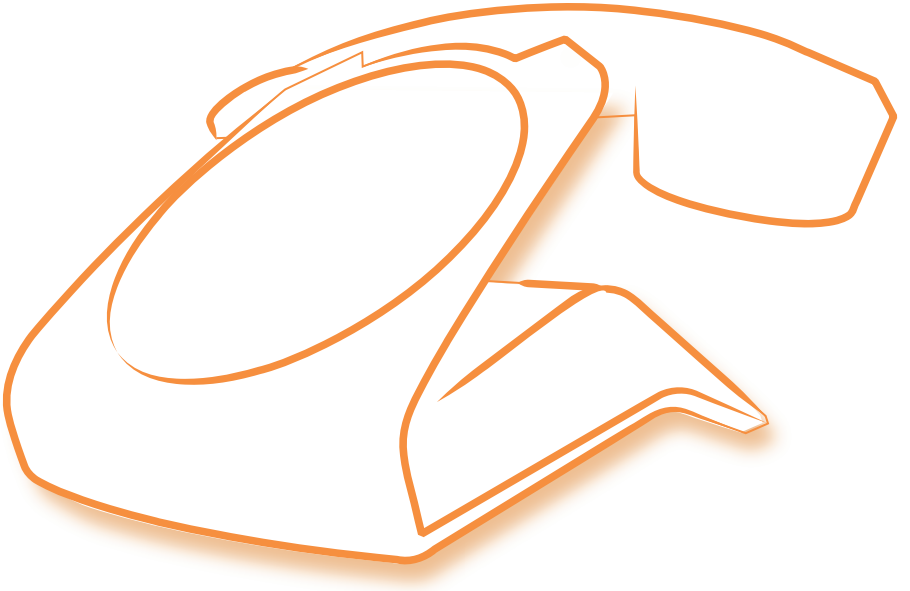

SIXT4 by SAGEMCOM

SAGEMCOM AUSTRALASIA PTY LTD
Suite 602, level 6
18-20 Orion Road, Lane Cove NSW 2066
PO BOX 4093
Australia
ABN 75 131 531 989
Tel : +61 (0) 2 9420 7800
Fax : +61 (0) 2 9420 7888
www.sagemcom.com

253423921A - 09/2011

All rights reserved. Sagemcom Australasia PTY LTD reserves the right to change the technical characteristics of its products and services or to stop marketing them at any time. The information and specifications included are subject to change without prior notice. Sagemcom Australasia Pty Ltd tries to ensure that all information in this document is correct, but does not accept liability for error or omission. Non contractual document. All trademarks are registered by their respective owners. Simplified joint stock company - Capital 35 703 000 € - 518 250 360 RCS Nanterre.